

# HLD-P080

## Desk/Wall Holder

### Mounting Instructions



The HLD-P080 is a plastic holder for the PowerScan™ 8000 and PowerScan™ 9000 families of barcode readers, designed to be mounted on a wall or fixed to a desk.

#### Installation

The mounting kit supplied with the holder contains the following components:

- 1 HLD-P080
- 1 spacer
- 2 self-tapping screws
- 2 threaded dowels
- 2 adhesive strips

When used with PowerScan™ 8000 readers without display, the spacer must be installed to the holder as shown in Figure 1.

**Figure 1**



[www.datalogic.com](http://www.datalogic.com)



820093714 (Rev. D) June 2017

#### Desktop Use

To fix the HLD-P080 to a desktop, use the double-sided adhesive strips following the steps below:

1. Carefully clean the surfaces of the desk and of the bottom of the HLD-P080 with alcohol to remove any impurities that could reduce the adhesion.
2. Remove the protective plastic from one side of the adhesive strips and stick them on the HLD-P080 bottom as shown in Figure 2.

**Figure 2**




3. Remove the plastic from the other side of the strips and affix the HLD-P080 to the desk.

#### Wall-Mount Use

Wall mounting is accomplished using the two threaded dowels and the self-tapping screws, which will be inserted into the two holder mounting holes.

**Figure 3**

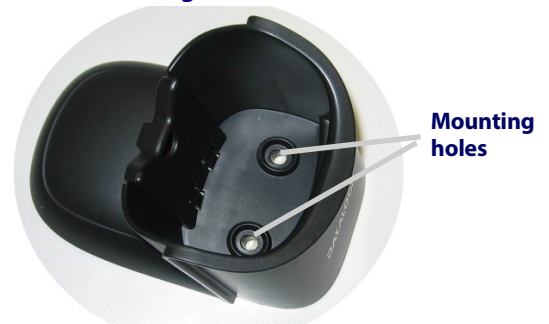

1. Using the holder mounting holes as a pattern, mark the wall where you desire to mount the HLD-P080.
2. Drill two appropriate-size holes.
3. Insert the threaded dowels into the holes.
4. Position the holder on the wall with the opening inclined upwards and affix it by means of the two screws.

**Figure 4**

